



BEAMZ
MADE
EAZY

150.626 V1

COB30RGB
QUICK START GUIDE

CONTROL MENU

MENU			DESCRIPTION
DMX MODE	Addr	8 CH	DMX address setting
		5 CH	
		3 CH	
STATIC COLORS	Stat	S 01-17	Static colours
AUTO	Auto	Au 1-5	Select auto program
SOUND MODE	Soun	So 1-5	Select sound program
SPEED	SPEE	SP 1-9	Select speed for auto or sound program
MIC SENSITIVITY	SEnS	SE 1-9	Sound sensitivity
EDIT COLOUR	Colo	r000-255	Manual control
		g000-255	
		b000-255	
DIMMING	dIMM	d11-d1 9	Manual dimmer
SILENT SCENE	SILE	on/off	Silent scene by Sound program
SLAVE	SLAV	Slave	Slave
INFRARED	InFr	on/off	Enable or Disenable IR remote

REMOTE CONTROLLER

BLACK OUT Mode

Press <BLACK OUT> off existing modes. Press <BLACK OUT> return the last modes.

AUTO Mode

Automatic mode will enable you to run the automatic programs on the product.

To turn on Automatic mode:

1. Press <AUTO> on the remote controller.
2. Press <+> or <-> to choose between the different auto programs.

SOUND Mode

Sound-Active mode will enable the product to respond to the music.

To turn on Sound-Active mode:

1. Press <SOUND> on the remote controller.
2. Press <+> or <-> to choose between the different sound programs.

STROBE Mode

To adjust the strobe speed of the automatic program and the sound active program.

1. Press <STROBE> on the remote controller.
2. Press <+> or <-> to either increase or decrease the speed of the program.
3. Press <STROBE> again to turn off the strobe.

SPEED Mode

To adjust the speed of the automatic program and the sound active program.

1. Press <SPEED> on the remote controller.
2. Press <+> or <-> to either increase or decrease the speed of the program.

SENSITIVITY Mode

To adjust sound sensitivity for in Sound-Active mode

1. Press <SENSITIVITY> on the remote controller.
2. Press <+> or <-> to either increase or decrease sound sensitivity.

DMX / % Mode

To enable DMX or disallow DMX on the product.

Press <DMX> on the remote controller, the product work on the DMX controlling modes.

MANUAL Mode

1. Press <MANUAL> on the remote controller.
2. Press <R>, <G>, or <W> (red, green, blue or white) to choose your colour.
3. Press again <R>, <G>, or <W> (red, green, blue or white) close your colour.
4. Press <+> or <-> to either increase or decrease the percentage of each colour.



DMX CHANNELS

3 Channels

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Colour	000-255	Red 0-100%
2		000-255	Green 0-100%
3		000-255	Blue 0-100%

5 Channels

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Dimmer	000-255	Master dimming (0-100%)
2	Strobe	000-255	Stroboscope (Rate 0-100%)
3	Macro	000-009	No function
		010-019	Red
		020-029	Green
		030-039	Blue
		040-049	Yellow
		050-059	Magenta
		060-069	Cyan
		070-079	Dark orange
		080-089	Green yellow
		090-099	Salmon
		100-109	Turquoise
		110-119	Light Green
		120-129	Orange
		130-139	Lavender
		140-149	Light blue
		150-159	Dark blue
		160-169	Pink
		170-255	Full on
4	Mode	000-009	No function
		010-019	Auto program1
		020-029	Auto program2
		030-039	Auto program3
		040-049	Auto program4
		050-059	Auto program5
		060-069	Sound program1
		070-079	Sound program2
		080-089	Sound program3
		090-099	Sound program4
		100-255	Sound program5
5	Speed	000-255	Auto and Sound program speed (Slow-fast)



BEAMZ

**YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT**



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

