



BEAMZ
MADE
EAZY

153.705 V1.1

WHIRLWIND
QUICK START GUIDE

POWERSUPPLY


On the label on the backside of the unit is indicated on this type of power supply must be connected. Check that the mains voltage corresponds to this, all other voltages than specified, the light effect can be irreparably damaged. The product must also be directly connected to the mains and may be used. No dimmer or adjustable power supply.




WARNING! Always connect the unit to a protected circuit (circuit breaker or fuse). Make sure the unit has an appropriate electrical ground to avoid the risk of electrocution or fire.

DMX512 CONTROL

If you are using a standard DMX controller, you can connect the DMX output of the controller directly to the DMX input of the first unit in a DMX chain. Always connect the output of one unit with the input of the next unit until all units are connected.

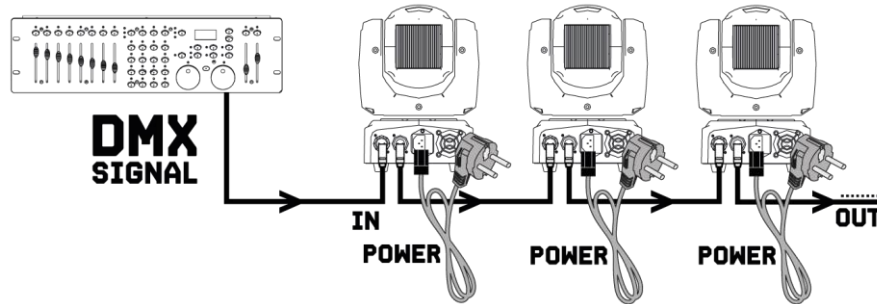

CAUTION! At the last unit, you must close the DMX line with a terminating resistor. Take an XLR connector and solder a 120 Ohm resistor between signal (-) and signal (+) and connect it to the DMX output of the last unit in the line.

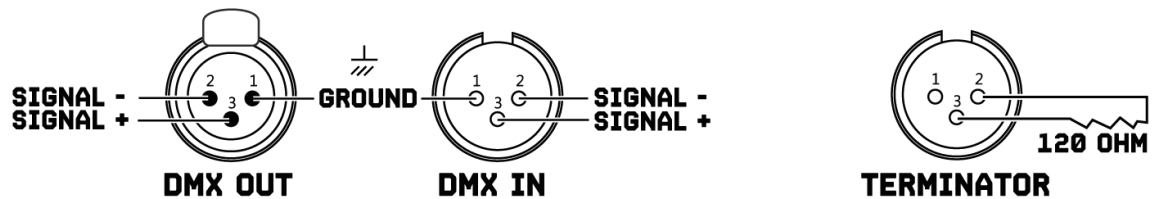

REMOTE CONTROLLER

| BUTTON | FUNCTION |
|--------|-------------------------|
| ON | ON |
| OFF | OFF |
| DMX | DMX Mode |
| AUTO | Auto Running Mode |
| SPEED+ | Auto Running Speed up |
| SPEED- | Auto Running Speed down |
| VOICE | Sound Control Mode |
| MIC+ | Sound Sensitive + |
| MIC- | Sound Sensitive - |



CONTROL MENU

| MENU | | DESCRIPTION |
|-------------|------------------------|------------------------------------|
| A001-A512 | | DMX address setting |
| A1.1 - A1.9 | Internal program 1-9 | Auto program |
| S1.1 - S1.9 | Internal sound program | Sound program, 1-9 means sensitive |

DMX CHANNELS

| CHANNEL | FUNCTION | VALUE | DESCRIPTION |
|---------|----------------------|---------|--------------------------------------|
| 1 | PAN Rotation | 000-255 | 0-360degrees movement |
| 2 | PAN Rotation endless | 000-009 | No function |
| | | 010-127 | Pan forward rotate from slow to fast |
| | | 128-255 | Pan reverse rotate from fast to slow |
| 3 | Dimmer | 000-255 | Linear dimmer from dark to brighter |
| 4 | Strobe | 000-009 | No function |
| | | 010-255 | Strobe from slow to fast |
| 5 | Gobo Colour | 000-255 | Red dimmer from dark to brighter |
| 6 | | 000-255 | Green dimmer from dark to brighter |
| 7 | | 000-255 | Blue dimmer from dark to brighter |
| 8 | | 000-255 | White dimmer from dark to brighter |
| 9 | Line Colour | 000-255 | Red dimmer from dark to brighter |
| 10 | | 000-255 | Green dimmer from dark to brighter |
| 11 | | 000-255 | Blue dimmer from dark to brighter |
| 12 | | 000-255 | White dimmer from dark to brighter |
| 13 | Ball Colour | 000-255 | Red dimmer from dark to brighter |
| 14 | | 000-255 | Green dimmer from dark to brighter |
| 15 | | 000-255 | Blue dimmer from dark to brighter |
| 16 | | 000-255 | White dimmer from dark to brighter |
| 17 | Mode | 000-050 | CH1-CH16 Valid |
| | | 051-149 | Random Auto Running |
| | | 150-255 | Sound Control |
| 18 | Reset | 000-199 | None |
| | | 200-255 | Reset after 3s |



BEAMZ

**YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT**



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

