



**BEAMZ**  
**MADE**  
**EAZY**


150.579 V1.1

**BBP62**

**QUICK START GUIDE**

# CONTROL MENU

If the display is in standby, unlock it:

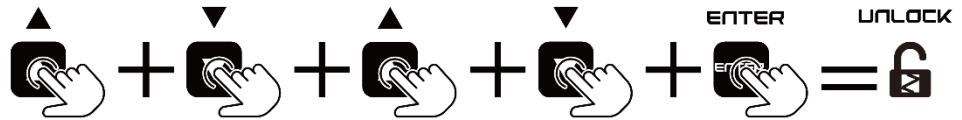

MENU	DESCRIPTION		
<b>CHOOSE PATTERN</b>	Static Color	R	000-255
		G	000-255
		B	000-255
		W	000-255
		A	000-255
		P	000-255
		Strobe	000-255
	Macro Color	1-16	
	Show Mode	AUTO	SP: 0-20
		FADE	SP: 0-20
		SNAP	SP: 0-20
		R-STRO	SP: 0-20
		G-STRO	SP: 0-20
		B-STRO	SP: 0-20
		A-STRO	SP: 0-20
		(Options)	
	User Colors	R	000-255
		G	000-255
		B	000-255
		W	000-255
A		000-255	
P		000-255	
Bank		1-16	
User Run	Static Color	Color Mode: 001-016	
	Auto Mode	Speed:001-020	
<b>USER SETTINGS</b>	Channel	07-Ch	
		11-Ch	
	DMX Address	001-512	
	Slave Mode		
WiFi Mode			
<b>SYSTEM SETTINGS</b>	White Balance	R	127-255
		G	127-255
		B	127-255
		W	127-255
		A	127-255
		P	127-255
	Show Battery	YES/NO	
	Display Sleep	Open	
		5Sec	
		10Sec	
		15Sec	
	Dimmer Option	Normal	
		Dimmer-1	
		Dimmer-2	
		Dimmer-3	
	Auto Power	On/Off	

	IRC Setting	YES/NO
	Wireless DMX Setting	YES/NO
	Wireless DMX FREQ	1CH-7CH
	Power Setting	High/Medium/Low
	Emergency Lamp	YES/NO
	DMX Hold	YES/NO
	Auto Lock	YES/NO
<b>INFORMATION</b>	Work Hours	001-999
	Software Version	Vxxxx
	Hardware Version	OLED90 6in1
	Power on	

# DMX CHANNELS

## 7 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	RED	000-255	Red from darkness to brightness
2	GREEN	000-255	Green from darkness to brightness
3	BLUE	000-255	Blue from darkness to brightness
4	WHITE	000-255	White from darkness to brightness
5	AMBER	000-255	Amber from darkness to brightness
6	UV	000-255	UV from darkness to brightness
7	DIMMER	000-019	Normal
		020-039	Dimmer-1
		040-059	Dimmer-2
		060-255	Dimmer-3

## 11 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	TOTAL DIMMER	000-255	Total dimmer
2	STROBE	000-009	Strobe close
		010-255	Strobe open, from slow to fast
3	RED	000-255	Red from darkness to brightness
4	GREEN	000-255	Green from darkness to brightness
5	BLUE	000-255	Blue from darkness to brightness
6	WHITE	000-255	White from darkness to brightness
7	AMBER	000-255	Amber from darkness to brightness
8	UV	000-255	UV from darkness to brightness
9	PROGRAMS	000-009	Dimmer mode
		010-029	Color selection: color selection for the 10th channel
		030-049	Jump, the channel 10 controls the speed
		050-069	Gradient, the channel 10 controls the speed
		070-089	Sudden, the channel 10 controls the speed
		090-109	Red on+ white strobe, the channel 10 controls the speed
		110-129	Green on+ white strobe, the channel 10 controls the speed
		130-149	Blue on+ white strobe, the channel 10 controls the speed
		150-169	Amber on+ white strobe, the channel 10 controls the speed
170-255	UV on+ white strobe, the channel 10 controls the speed		
10	COLOR SELECT OR SPEED	000-255	The function of this channel depends on the value of the 9th channel: When the 9th channel is 10-29, this channel is used to select the color When the 9th channel is 30-255, the control speed of this channel: 0 is the slowest, 255 is the fastest
11	DIMMER	000-019	Normal
		020-039	Dimmer-1
		040-059	Dimmer-2
		060-255	Dimmer-3



A series of horizontal dotted lines spanning the width of the page, providing a guide for handwriting practice.



A series of horizontal dotted lines for writing, spanning the width of the page.



A series of horizontal dotted lines spanning the width of the page, intended for handwriting practice.



# BEAMZ

**YOUR FUTURE**  
**YOUR SKILLS**  
**YOUR PLATFORM**  
**YOUR PARTY**  
**YOUR EVENT**



offers a wide range of high performance lighting equipment and related accessories for the rental, entertainment and architectural lighting markets. BeamZ Pro stands for performance, innovation and value pricing!

