



BEAMZ
MADE
EAZY


150.721 V1.0

LCB1215IP

QUICK **START GUIDE**


CONTROL MENU

If the display is in standby, unlock it:

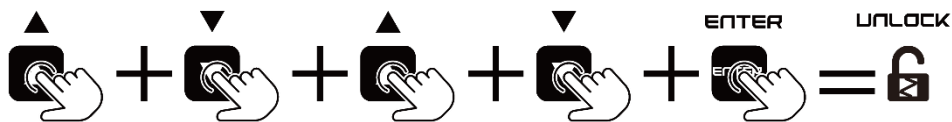

MENU			DESCRIPTION
MANUAL	Red	000-255	Manual control
	Green	000-255	
	Blue	000-255	
	White	000-255	
	Amber	000-255	
	Lime	000-255	
	Strobe	00-20	
DREAM	Program	001-031	Select desired program
	Speed	000-100	Select desired speed of dream program
	Strobe	00-20	Select desired strobe of dream program
AUTO RUN	FQN	01-99	Select desired auto program
DIMMER	Respon 01		Fixture response immediately on DMX changes
	Respon 02		Fixture response smoothly on DMX changes
DIMMER CURVE	Linear		Dimmer curve linear
	Exp		Dimmer curve exponential
	I. Square		Dimmer curve logarithmic
	S-Curve		Dimmer curve S-shaped
DMX MODE	Address	001-512	DMX address setting
	CH Mode	2Ch	Select desired DMX mode
		6CH1	
		6CH2	
		8CH	
		11CH	
		38Ch	
		41 Ch	
		74 CH	
		77CH	
SLAVE		Slave mode	
LOCK KEY	On		Enable or disable the keylock function
	Off		
VERSION	Vx.xx	Software version	

DIMMER CURVE

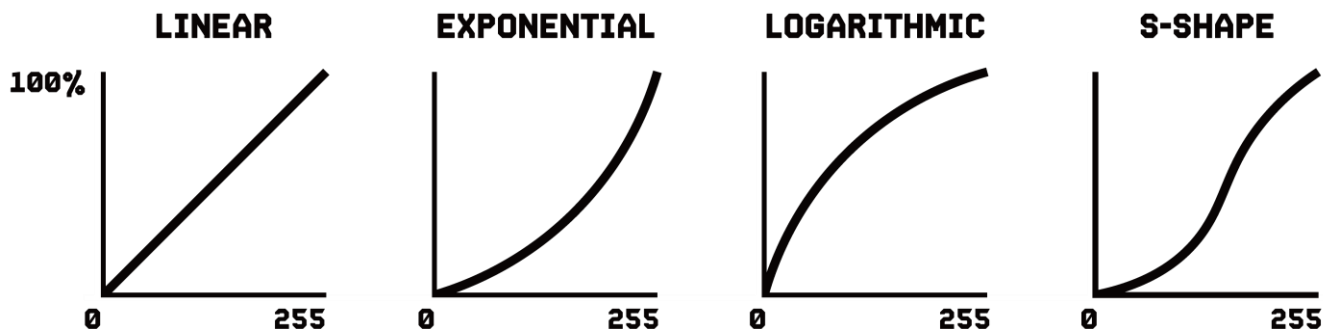

DMX CHANNELS

2 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Dimmer	000-255	Master Dimmer 0-100%
2	Colour macro	000-005	No function
		006-013	Red
		014-021	Amber
		022-029	Yellow warm
		030-037	Yellow
		038-045	Green
		046-053	Turquoise
		054-061	Cyan
		062-069	Blue
		070-077	Lavender
		078-085	Mauve
		086-093	Magenta
		094-101	Pink
		102-109	Warm White
		110-117	White
		118-125	Cold White
		126-128	Colour jumping stop
		129-192	Colour jumping Speed Colour 1-12, from slow to fast
		193-255	Colour fading Speed Colour 1- 12, from slow to fast

6 CHANNELS MODE2

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Red	000-255	Dimmer 0-100%
2	Green	000-255	Dimmer 0-100%
3	Blue	000-255	Dimmer 0-100%
4	White	000-255	Dimmer 0-100%
5	Amber	000-255	Dimmer 0-100%
6	Lime	000-255	Dimmer 0-100%

8 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Dimmer	000-255	Master Dimmer 0-100%
2	Strobe	000-005	Strobe open
		006-010	Strobe closed
		011-033	Pulse random, from slow to fast
		034-056	Ramp up random, from slow to fast
		057-079	Ramp down random, from slow to fast
		080-102	Random strobe effect, from slow to fast
		103-127	Strobe break effect, 5sec to 1sec (very short flash)
		128-250	Strobe, from slow to fast 0-20Hz
		251-255	Strobe open
3	Red	000-255	Dimmer 0-100%
4	Green	000-255	Dimmer 0-100%
5	Blue	000-255	Dimmer 0-100%
6	White	000-255	Dimmer 0-100%
7	Amber	000-255	Dimmer 0-100%
8	Lime	000-255	Dimmer 0-100%



BEAMZ

**YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT**



offers a wide range of high performance lighting equipment and related accessories for the rental, entertainment and architectural lighting markets. BeamZ Pro stands for performance, innovation and value pricing!

